 
 


NEW UPGRADE – AGGIORNAMENTO

 
VECCHIO - OLD

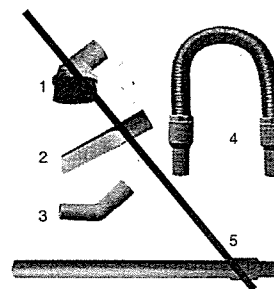

NUOVO - NEW

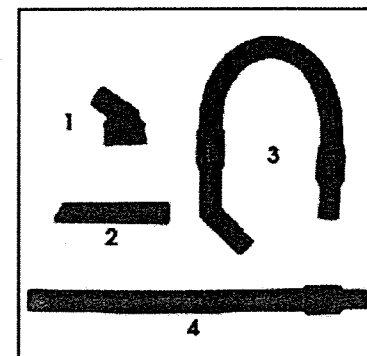

Nuova soluzione - New solution

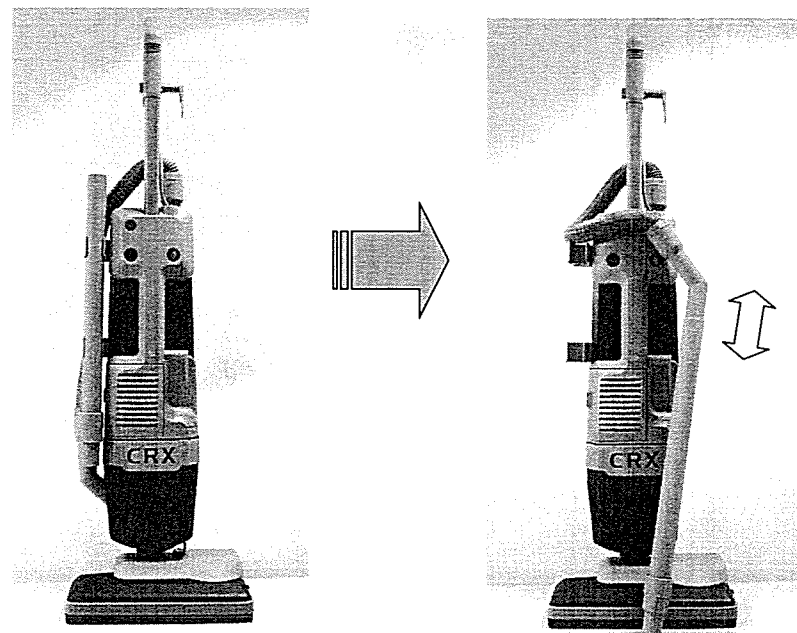

ENGLISH

- Do not leave the vacuum plugged in. Unplug from the outlet when not in use and before servicing or cleaning.
- Your model is a dry unit, do not use outdoors, on wet surfaces or to vacuum any sort of liquid. Only dry surfaces should be vacuumed. Do not use this appliance to pick up liquids as this could impair the electric safety of the vacuum cleaner. This applies to freshly shampooed carpets: wait until they are dry.
- Do not allow the vacuum cleaner to be used as a toy. Close attention is necessary when used by or near children.
- If the power cord reel or the cable itself are damaged they should be replaced only by an authorized after sale service. Never use the cleaner with a damaged cord or plug.
- If the appliance is not working as it should, has been dropped, damaged, left outdoors or immersed in water bring the unit to a dealer or to an after sale service.
- For any repair or for purchase of accessory parts contact only your private dealer or an authorized technical center. Do not attempt any repairs.
- Do not pull or carry by the cord, use the cord as an handle, close a door on the cord, or pull the cord around sharp edges or corners. Do not run the appliance over the cord. Keep the cord away from heated surfaces.
- Do not unplug by pulling the cord. To unplug, grasp the plug, not the cord. Do not handle the plug or the appliance itself with wet hands.
- If your appliance is equipped with a cord reel always hold the plug when rewinding onto the cord reel. Do not allow the plug to whip while rewinding.
- Floor attachments accessories and wands must not be used at head level to avoid injury to eyes and ears.
- Always keep hair, clothing, loose, fingers and all parts of the body away from openings and moving parts.
- Always put the switch into the OFF position after use.
- Use extra care when cleaning on stairs.
- When using this appliance with an accessory always unplug before connecting any rotating brush. In any case never touch the rotating brush while in use.

ENGLISH

- Do not run accessory over the vacuum cleaner cord or any extension cord.
- Avoid picking up sharp objects.
- Always turn off the appliance before connecting or disconnecting the hose.
- The plug connectors, the contacts of power socket must not come in contact with water. These items may only be cleaned with a dry cloth, no moisture must touch them. Danger of electric shock.
- Clean the unit only with a dry or slightly damp cloth when disconnected from the power supply. Never immerse in water.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Never use to pick up flammable or combustible liquids, such as gasoline, or use in areas where fumes may be present.
- Do not put any objects into the openings. Never use with opening blocked, keep free of dust, lint, hair and anything that may reduce the airflow.
- Do not vacuum toner dust. Toner, such as that used in printers and photocopiers can conduct electricity.
- Do not use without dustbag and/or filters in place. Dustbags are disposable and intended to be used only once. Do not attempt to reuse them.
- If your cleaner has the blowing function never use the blower to operate paint sprayers or similar devices that emit volatile or toxic vapors.

WARNING: no liability can be accepted for damages to persons and or objects caused by improper use, maintenance carried out by unauthorized personnel, use of unauthorized and non original spare parts, any form of tampering and or modifications to the original product.

• **The manufacturer reserves the right to modify the appliance and or the accessories supplied without prior notice.**

 
SAVE THESE INSTRUCTIONS

DESCRIPTION OF APPLIANCE

- 1 Handle
- 2 Handle attachment bolt
- 3 ON-OFF switch
- 4 Carrying handle
- 5 Exhaust air grid
- 6 Exhaust air filter (Hepa filter)
- 7 Full bag indicator (according models)
- 8 Removable lid of dust collection compartment
- 9 Hi/Low vac motor switch *

* on request

ASSEMBLING THE APPLIANCE

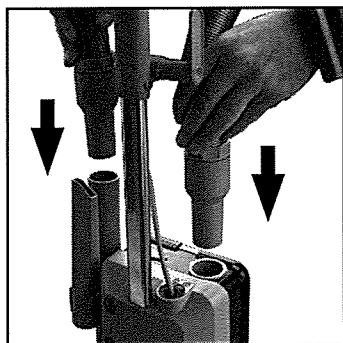

FULL BAG INDICATOR

The full bag indicator (7) shows when paper bag has to be replaced or if any object is obstructing the air intake (check the intake tube and remove the obstruction).

 
REPLACING THE FILTER BAG

Remove the cover. Place the dust bag into the container, by inserting the bag-holding sleeve into the dust bag hole and by pushing the safety ring all the way in. If filter bag is not placed correctly, closing the cover will be impossible.




REPLACING THE FILTER

Pull out the filter holder and replace the filter, or clean it by tapping it lightly (replace it approximately every 20 bags). Do not start the device without the filter placed below the dust bag; the suction of foreign bodies might damage the engine.

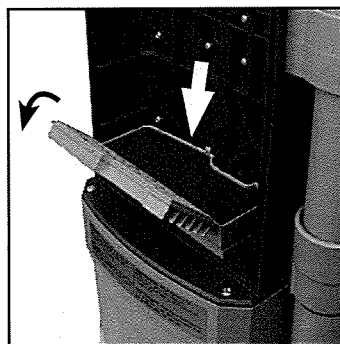

**REPLACING THE HEPA FILTER
REPLACING THE PRE-FILTER**

 
Pull latch "A" in order to unhook the vent grid; at the same time, slide it (in the direction shown by the arrow) so that it comes free. The pre-filter is housed in the air exhaust under the Hepa filter. Replace the pre-filter or clean it, by washing it with water; dry it and carefully replace it in its housing. Assemble the Hepa filter and the vent grid again, by sliding it all the way in until you hear the latch snapping into place.

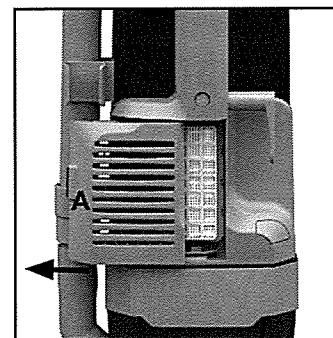

STARTING THE POWER BASE

To start operating: push the unhook pedal downwards / push the cover (according to the model). The power base will start. Avoid frequent use of the power base on particularly dedicate rugs or carpets as over time the fabric could be damaged.

 WARNING: Do not use the power base on rug fringes as these could become entangled in the roller.

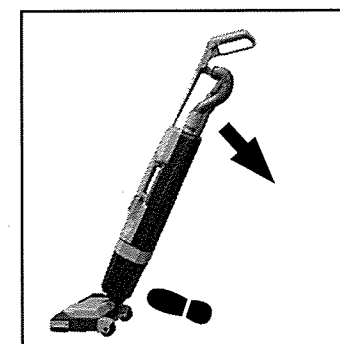

CHECKING THE BASE

The power base device continuously monitors the operation of the power base:
Green light: the base is working correctly
Red light: the base is either blocked or it is undergoing excessive stress. Turn the machine off, detach the plug from the mains, and look for the cause of the blocking.

